


DETAIL A

WHEN END OF TYPICAL RUN IS AT MISSING POST (A) OR (B)

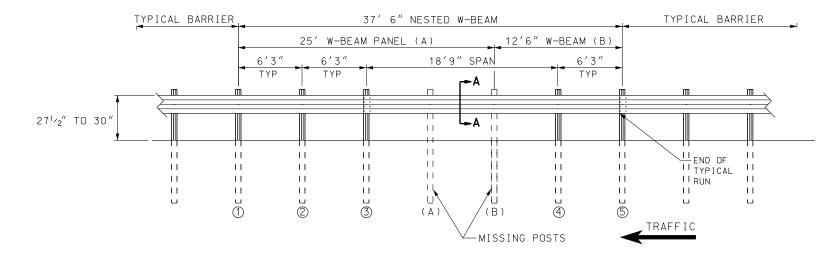

DETAIL B


WHEN END OF TYPICAL RUN IS AT POST 4 OR 5

NOTES FOR DETAIL "A"

- 1. ATTACH 12'6" W-BEAM PANEL (A) AT POSTS 1 THROUGH 3. ATTACH 25' W-BEAM PANEL (B) AT POSTS 3, 4, AND 5, SPANNING MISSING POSTS (A) AND (B).
- 2. PLACE INITIAL RUN OVER RAIL ELEMENTS A & B.
- 3. MAKE ALL SPLICES AND BOLT RAIL ELEMENTS TOGETHER AS PER GUARDRAIL INSTALLATION REQUIREMENTS.

NOTES FOR DETAIL "B"

- 1. ATTACH 12'6" W-BEAM PANEL (B) AT POSTS 4 AND 5. SPLICE 25' W-BEAM PANEL CONTINUE RUN TO POST 1.
- 2. PLACE STANDARD RUN OVER RAIL ELEMENTS A & B.
- 3. MAKE ALL SPLICES AND BOLT RAIL ELEMENTS TOGETHER AS PER GUARDRAIL INSTALLATION REQUIREMENTS.

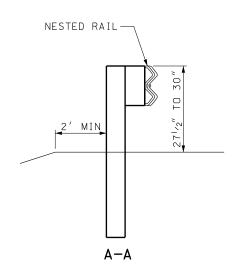



DGN F11

STD DWG

BA 4N

EC-2007